

# YUGO (Yugoslavia)

## INDEX OF SERVICE OPERATIONS

Page No.	Page No.	Page No.
<b>ACCESSORIES</b>	Starter, Replace..... 31-4	Cooling System..... 31-3
Blower Motor, Replace..... 31-5	Starter Motor Specifications..... 31-2	Crankshaft & Bearings..... 31-2
Heater Core, Replace..... 31-5	Stop Light Switch, Replace..... 31-4	Drive Axle..... 31-2
Radio, Replace..... 31-4	Turn Signal Switch, Replace..... 31-4	Engine Tightening..... 31-3
<b>BRAKES</b>	Windshield Wiper Motor & Linkage, Replace..... 31-4	Front Wheel Alignment..... 31-3
Brake Adjustments..... 31-12	Windshield Wiper Switch, Replace..... 31-4	General Engine..... 31-2
Brake Pads, Replace..... 31-12	<b>ENGINE</b>	Pistons, Pins & Rings..... 31-2
Brake Shoes, Replace..... 31-12	Crankshaft & Bearings Specifications..... 31-2	Rear Wheel Alignment..... 31-3
Brake specifications..... 31-3	Cylinder Head, Replace..... 31-9	Starter Motor..... 31-2
Caliper, Replace..... 31-12	Engine Assembly..... 31-6	Tune Up..... 28
Caliper Service..... 31-12	Engine Disassembly..... 31-5	Valves..... 31-3
Master Cylinder, Replace..... 31-12	Engine, Replace..... 31-5	<b>STEERING GEAR</b>
Parking Brake, Adjust..... 31-12	Engine Tightening Specifications..... 31-3	Steering Gear, Replace..... 31-16
Power Booster, Replace..... 31-12	Oil Pump Service..... 31-10	<b>SUSPENSION, FRONT</b>
Rear Brake Pressure Compensator, Adjust..... 31-12	Pistons, Rings & Pins Specifications..... 31-2	Axle Shaft, Replace..... 31-16
<b>CLUTCH</b>	Timing Belt, Replace..... 31-10	Drive Axle Service..... 31-16
Clutch Pedal, Adjust..... 31-11	Tune Up Specifications..... 28	Front Suspension Service..... 31-15
Clutch, Replace..... 31-11	Valve Guides..... 31-8	Shock Absorber, Replace..... 31-16
<b>COOLING SYSTEM</b>	Valves, Adjust..... 31-8	Wheel Hub, Replace..... 31-16
Specifications..... 31-3	Valve Specifications..... 31-3	<b>TRANSAXLE</b>
Water Pump, Replace..... 31-11	Valve Timing, Adjust..... 31-9	Manual Transaxle, Replace..... 31-11
<b>ELECTRICAL</b>	Water Pump, Replace..... 31-11	<b>TROUBLESHOOTING</b> ..... 33
Alternator Testing..... 31-4	<b>FUEL, IGNITION &amp; GENERAL MAINTENANCE</b> ..... 65	<b>TUNE UP</b>
Alternator & Regulator Specifications..... 31-2	<b>REAR AXLE &amp; SUSPENSION</b>	Specifications..... 28
Blower Motor, Replace..... 31-5	Leaf Spring, Replace..... 31-14	<b>WHEEL ALIGNMENT</b>
Ignition Switch, Replace..... 31-4	Rear Suspension Service..... 31-14	Front..... 31-16
Instrument Cluster, Replace..... 31-4	Wheel Hub, Replace..... 31-14	Rear..... 31-16
Light Switch, Replace..... 31-4	<b>SPECIFICATIONS</b>	Wheel Alignment Specifications..... 31-3
Radio, Replace..... 31-4	Alternator & Regulator..... 31-2	<b>WINDSHIELD WIPER</b>
Rear Wiper Motor & Linkage, Replace..... 31-4	Brakes..... 31-3	Wiper Motor & Linkage, Replace..... 31-4
Rear Wiper Switch, Replace..... 31-4	Capacity Data..... 31-3	Wiper Switch, Replace..... 31-4